




A **PACCAR** COMPANY

# Digital Mirrors (DM) Quick User's Guide - **DRIVING**



Drivers Side Digital Mirror Display

- 1** Glass Mirror Selector
- 2** Digital Mirror Selector
- 3** Mirror-Side Selector
- 4** Joystick
- 5** Screen Brighter/Menu-Up
- 6** Screen Dimmer/Menu-Down Button
- 7** Night Vision Selector
- 8** View-Type Selector

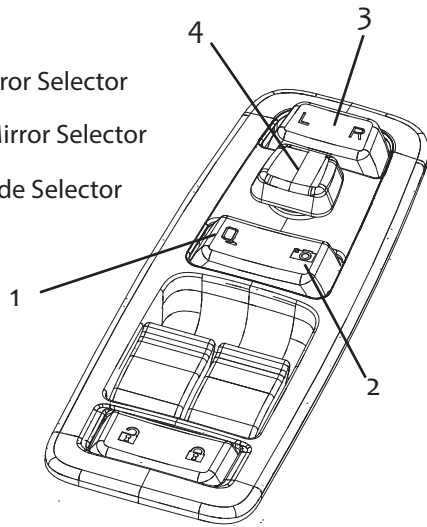

Door Control Module (DCM)  
(Driver's side only)

## **DRIVING - cont**

- 1) - The key is in the ON position.
- 2) - The PARKING BRAKE IS NOT engaged.
- 3) - The DIGITAL MIRROR must be selected on the Door Control Module (DCM). **2**

### **Adjust Brightness**

Step 1:  
Use **3** to select Left or Right Digital Mirror.

To increase brightness: Press **5** until desired level is achieved.      To decrease brightness: Press **6** until desired level is achieved.

### **View-Type Selection**

Step 1:  
Use **3** to select the Left or Right Digital Mirror.

Press **8** to cycle through Traditional/Panoramic/Expanded View-Types.

### **Pan Digital Mirror View**

Step 1:  
Use **3** to select the Left or Right Digital Mirror.

Step 2:  
Use the joystick **4** on the door control module to pan the view to the desired view.

Step 3:  
To save the resulting view, push down on and hold the joystick **4** for several seconds.

### **Night Vision**

Press **7** to cycle between ON/OFF/AUTO.




A **PACCAR** COMPANY

# Digital Mirrors (DM) Quick User's Guide -


**PARKED**

- 1) - The key is in the ON position.
- 2) - The PARKING BRAKE is engaged.
- 3) - The DIGITAL MIRROR must be selected on the Door Control Module (DCM). **2**

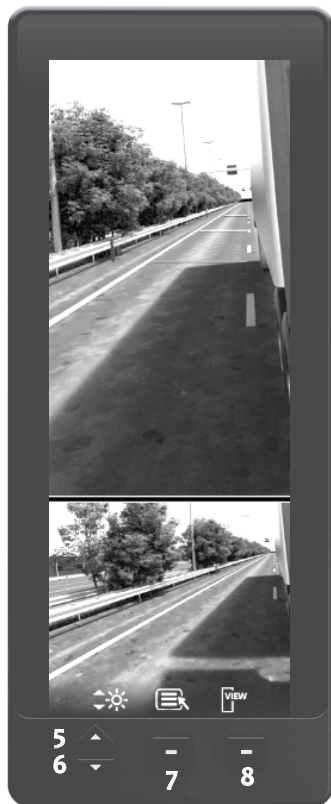

Drivers Side  
Digital Mirror Display

- 1** Glass Mirror Selector
- 2** Digital Mirror Selector
- 3** Mirror-Side Selector
- 4** Joystick

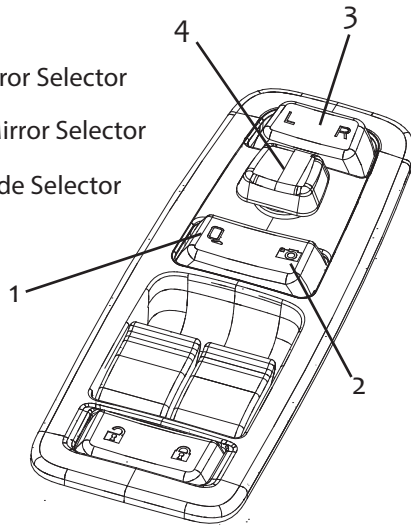

Door Control Module (DCM)  
(Driver's side only)

- 5** Screen Brighter/Menu-Up
- 6** Screen Dimmer/Menu-Down Button
- 7** Menu Access/ Menu-Highlighted-Choice Select
- 8** View-Type Selector

## PARKED - cont

### Adjust Brightness

Step 1:  
Press **3** to select Left or Right Digital Mirror.

To increase brightness: Press **5** until desired level is achieved.

To decrease brightness: Press **6** until desired level is achieved.

### View-Type Selection

Step 1:  
Press **3** to select the Left or Right Digital Mirror.

Press **8** to cycle through Traditional/Panoramic/Expanded View-Types.

### Pan Digital Mirror View

Step 1:  
Press **3** to select the Left or Right Digital Mirror.

Step 2:  
Use the joystick **4** to pan to the desired view.

Step 3:  
To SAVE the resulting view, push down on and hold the joystick **4** for several seconds.

### Set Trailer End-Line

Step 1:  
Press **7** to access the menu.

Step 2:  
Press **6** until "Set Trailer End Line" is highlighted.

Step 3:  
Press **7** and follow the on-screen instructions.

### Night Vision

Step 1:  
Press **7** to access the menu.

Step 2:  
Press **5** or **6** to navigate to Night Vision.

Step 3:  
Press **7** to cycle between ON/OFF/AUTO